

ESD Heel Strap - Fluorescent

Designed to be easily visible, these fluorescent heel grounders are especially useful in helping supervisors to see that they are being worn, even at a distance.

Features

- Hard-wearing heel grounders designed for long term use
- Clip type with the snap release - comfortable to wear and take off
- Double layered conductive cup (3.5mm x 230mm)
- Each heel grounder incorporates a 1 Meg Ohm safety resistor
- All Heel Grounders are designed for use in conjunction with ESD flooring or mats
- Recommended to be worn on both feet
- Reusable and can be washed by hand in mild detergents
- Conforms to the requirements of ANSI/ESD S-20.20, EIA 625



Notes

The heel grounder must be tested regularly using a footwear test station.

Details	Typical Value
Outer Conductive Surface (Black)	$10^3 - 10^5$ Ohms
Inner Anti-Static Surface (Grey)	$10^7 - 10^8$ Ohms
Conductive Tab (Yellow)	$10^3 - 10^4$ Ohms
Overall Resistivity	10^6 Ohms
Resistance	1Meg Resistor built in

Product Code	Description	Size	Additional notes
068-0002	ESD Heel Strap - Fluorescent	One Size	Each

Important Notice: This data sheet and its contents (the "Information") belong to Antistat or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The Information is subject to change without notice and replaces all data sheets previously supplied. The Information supplied is believed to be accurate but Antistat assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the Information and the suitability of the products for their purpose and not make any assumptions based on information included or omitted. Liability for loss or damage resulting from any reliance on the Information or use of it (including liability resulting from negligence or where Antistat was aware of the possibility of such loss or damage arising) is excluded. © Antistat 2020.

ESD Heel Strap - Fluorescent



1 Remove Heel Grounder from its packaging and place the Black Conductive Rubber Strip on the heel grip of the shoe.



2 Place the Neon Elastic Strip at the back of the shoe.



3 Push the Clip Fastener together to lock in place and pull the tail of the Neon Elastic Strap to tighten.



4 Feed the Grey Conductive Ribbon into the sock or shoe to complete the grounding path.




5 Inspect the Heel grounder for a secure and comfortable fit by gently tugging on the straps.



6 The footwear is now ready to be tested before entering a static sensitive area. Repeat with other shoe.

Important Notice: This data sheet and its contents (the "Information") belong to Antistat or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The Information is subject to change without notice and replaces all data sheets previously supplied. The Information supplied is believed to be accurate but Antistat assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the Information and the suitability of the products for their purpose and not make any assumptions based on information included or omitted. Liability for loss or damage resulting from any reliance on the Information or use of it (including liability resulting from negligence or where Antistat was aware of the possibility of such loss or damage arising) is excluded. © Antistat 2020.

ESD Heel Strap - Flourescent

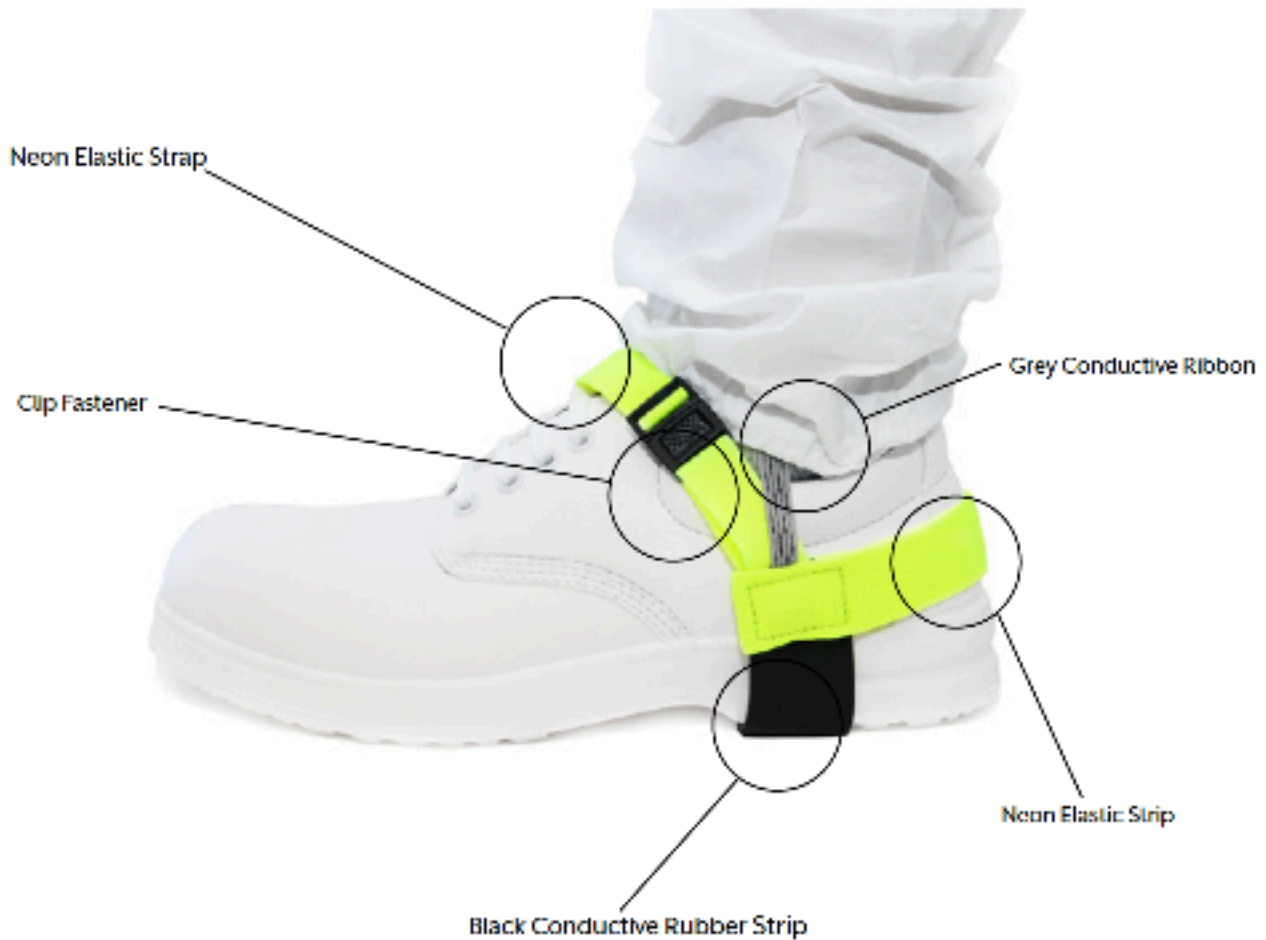

Buy online at
www.antistat.com



Call us on
+1 512-580-4220



Email us at
sales@antistat.com



Message us on Live Chat
www.antistat.com

Important Notice: This data sheet and its contents (the "Information") belong to Antistat or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The Information is subject to change without notice and replaces all data sheets previously supplied. The Information supplied is believed to be accurate but Antistat assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the Information and the suitability of the products for their purpose and not make any assumptions based on information included or omitted. Liability for loss or damage resulting from any reliance on the Information or use of it (including liability resulting from negligence or where Antistat was aware of the possibility of such loss or damage arising) is excluded. © Antistat 2020.